

QUICKCLIP INSTALLATION GUIDE



STEP 1: START & END BOARDS

Starter boards and end boards will require the use of 1/8" shim stock provided in your box or bucket of QuickClips.

Lay shim stock down on the outer framing board perpendicular to joists as shown on the photo.

Line starter boards up on the outer framing board on top of the shims.

Insert a clip on the inner side of the board at each joist to bring the board level with the shim.

Using a stainless steel screw, fastened through the face, fasten once through the face into the outer framing board on starter boards. Pre-drilling required. The screw should be going through the shim into the framing.

Use a screw and plug system to hide screws on start and end boards.

Once boards are fastened, screw each clip into the joist on the starter board.

Repeat this process on end boards.




STEP 2: FOLLOWING ROWS OF DECKING

Once the starter boards are fastened and the first row of clips have been screwed into place, you can start laying out rows of decking.

Place clips into boards at each joist with the wider wing facing outward. You should be able to line up 4-5 rows of decking BEFORE SCREWING CLIPS IN.

Once you have 4-5 rows of decking laid out with the clips sitting loosely in place, we recommend using a BoWrench to hold the rows in place. With the boards held in place, you can now go back and screw all clips into place.

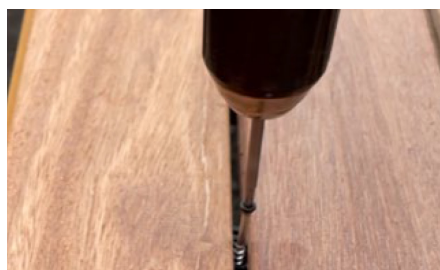


STEP 3 (If Required): BOWED BOARDS

If one of your boards are bowed, use a BoWrench to lock board into place. Then, place your clips just like in with the wider wing facing outward.

Where you had to place your BoWrench, fasten one clip. Then, you can release your BoWrench and the board will hold straight.

Once the clip has been fastened, you can repeat step 2 and lay out another 4-5 rows of decking.

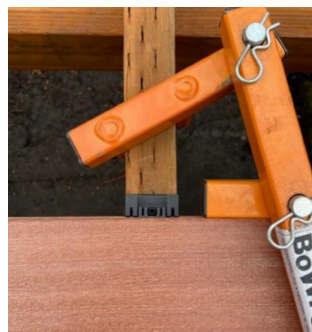

NOTES:

If you haven't framed the deck yet, we recommend installing the outer framing boards 1/8" above the joists, which eliminates the need for shims on starter and end boards.